
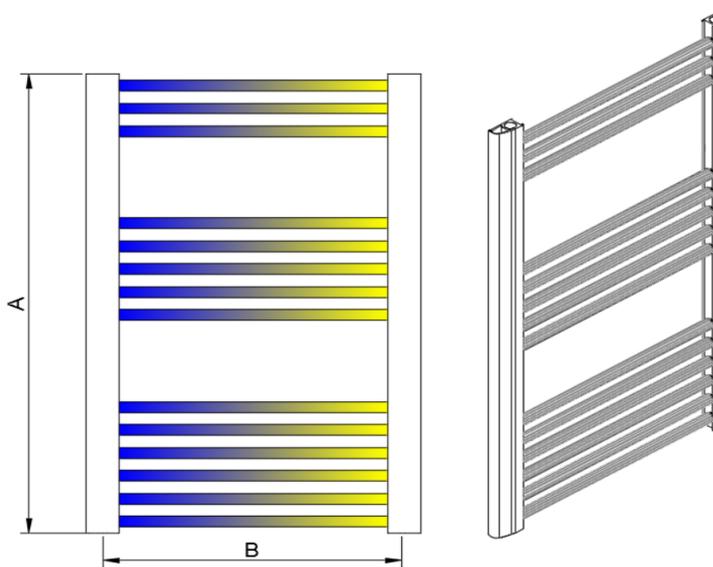
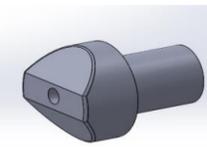
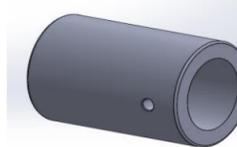
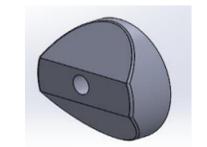




DIVALE INSTALLATION GUIDE

This product must be fitted only by a fully qualified installer.

DESCRIPTION		DESCRIPTION	ILLUSTRATION
 <p>RADIATOR x 1</p>		Fixing choose the appropriate fixing for the wall material if required	
		PTFE tape	
		Electric drill	
		Masonry drill bit appropriate to the fixings	
		Adjustable spanner	
 RADIATOR BRACKETS x 4	 WALL BRACKETS x 4	Radiator valve hex key	
 FIXING BRACKETS x 4	 BRACKET COVER x 4	Flat head and philips head screw drivers	
		1 lock shield valve and 1 gate or thermostatic valve	
 Spirit level			
 END PLUG x 1	 RAD. SCREWS x 4		
 AIR VENT x 1	 WALL ANCHORS x 4		
	 FIXING SCREWS x 4		
		Measuring tape	

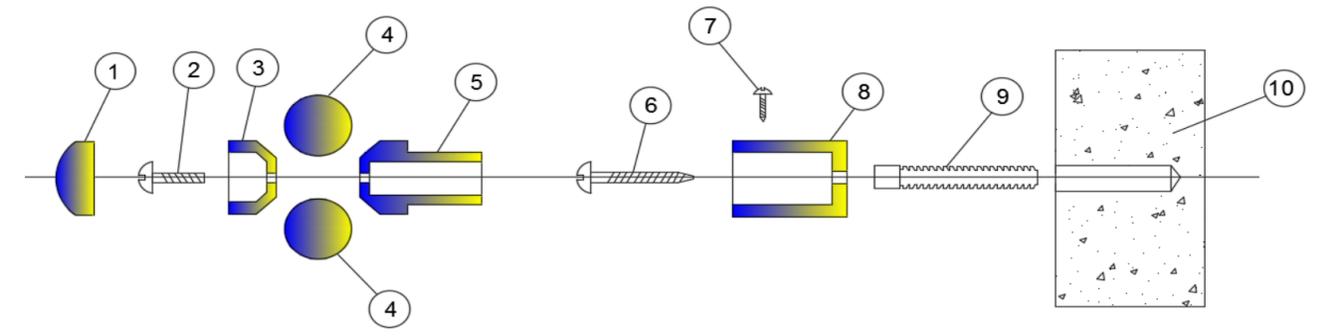

1	BRACKET COVER
2	RAD. SCREW
3	FIXING BRACKET
4	RADIATOR
5	RAD. BRACKET
6	WALL SCREW
7	FIXING SCREW
8	WALL BRACKET
9	WALL ANCHOR
10	WALL

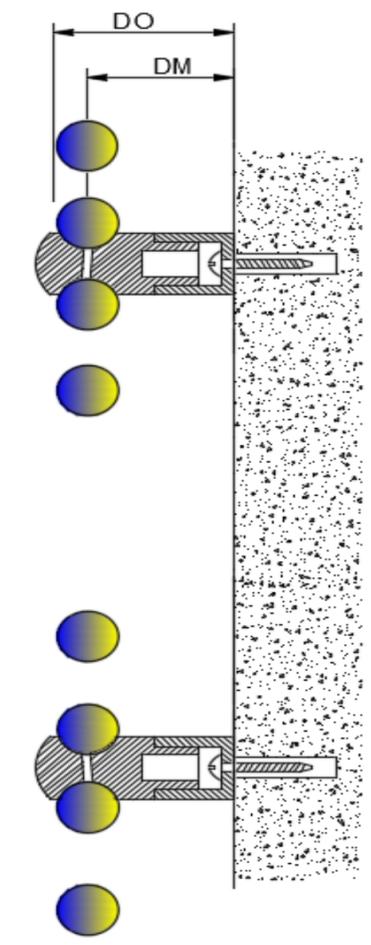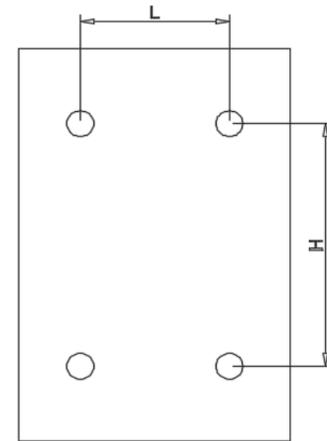

NAMES	A	B	TUBE (QTY)	DM	DO	H	L
DIVALE	800	455	14	70-90	85-105	720	355
DIVALE	1200	455	21	70-90	85-105	1120	355
DIVALE	1480	455	28	70-90	85-105	1400	355

GENERAL RECOMMENDATION

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 5,5-8,5 range and/or when the dissolved is above 0,1mg/liter, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds 50°C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical agents during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature 95°C, maximum working pressure 4 bar.